


Instructions: X TOUCH, 1 Button Switch

Mounting instructions

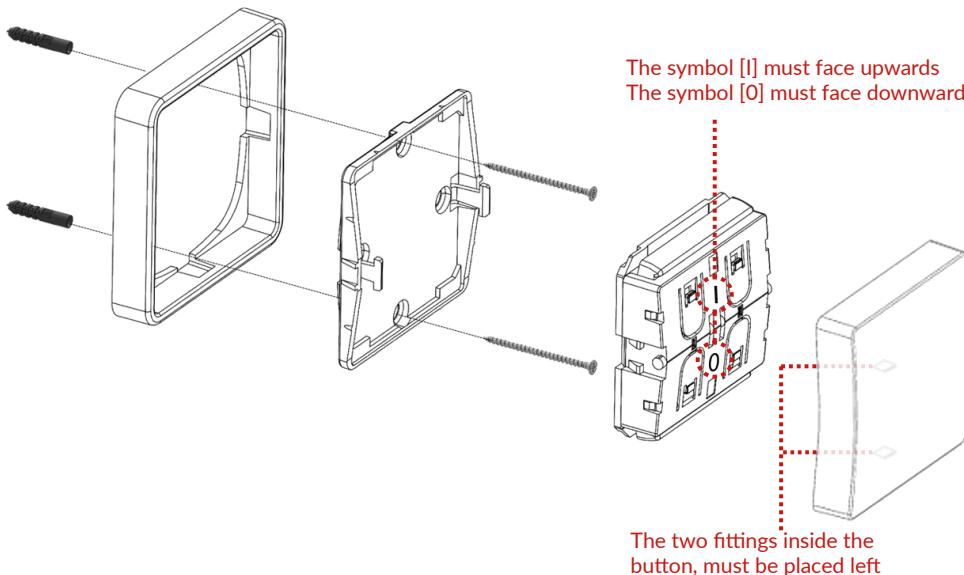


Programming

Programming via app:




Step 1

Beware! Check that the electronics and the buttons are positioned as per the above illustration, and they are correctly assembled.
Activate the programming mode through the Philips MC App. Please read more about how to do so on the instruction manual included in the luminaire.

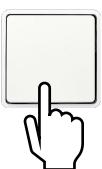


Step 2

Activate the programming mode of the switch by following these steps:
2A: Press and hold the lower button [0] down for more than 12 seconds, then release the button.
2B: Press shortly the lower button [0] (less than 2 seconds).
2C: Press the lower button [0] again and hold it down for more than 12 seconds, then release it.
The switch is now in "programming" mode. If the app gives you a feedback "switch has been detected", the switch is now included into the group, and you can move forward to step 4.

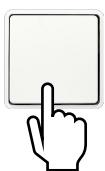

Step 3

If the app did not show the feedback "switch has been detected", then proceed as follows:
3A: short pressure on the lower [0] button (less than 2 seconds), and repeat up to 16 times, until the app shows the "switch has been detected" message. When the app shows this message, the switch is included into the group, and you can move forward to step 4.

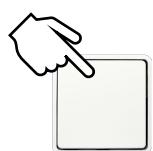

Step 4

Shut the programming mode down by pushing shortly (less than 2 seconds) on the upper button [I].


Step 5

Try the button out by switching the light on, off and dimming. In the app, push the button "everything is fine" if everything works as intended. If it does not work, press the button "my switch doesn't work" and repeat the steps from 2 on.
The coding of the switch is now terminated, and you can go on and program the other functions in the app.

Brugervejledning: X TOUCH 1 TANGENT



Montering

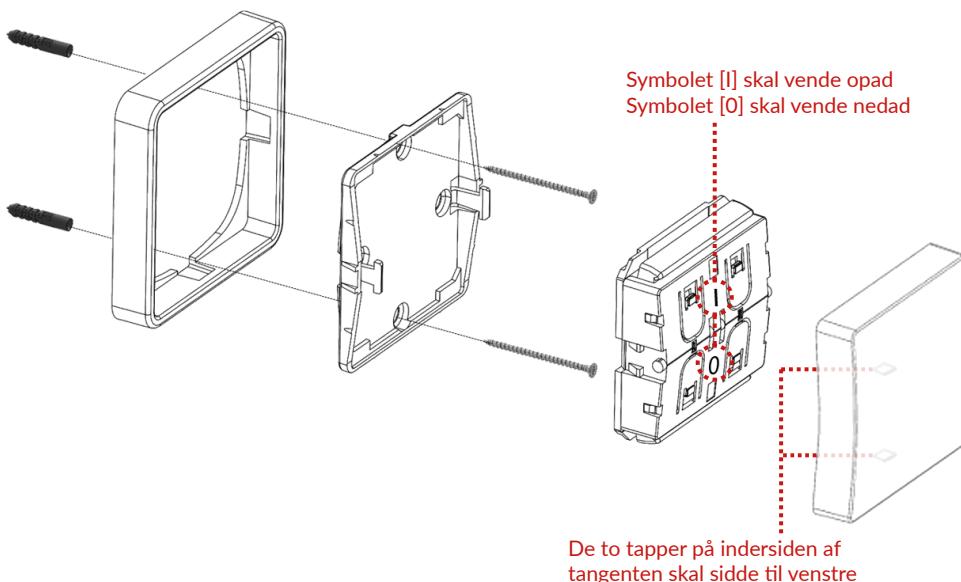


Programmering

Programmering via app:



Step 1

OBS!: Tjek at tangent og tryk vender som på ovenstående illustration og er sat korrekt sammen.
Aktivér armaturets programmeringsmode via Philips MC App. Læs mere om
hvordan dette gøres i manualen der følger med armaturet.

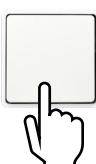

Step 2

Aktivér trykkets programmeringsmode ved at gøre følgende:
2.A Tryk og hold den nederste tast [0] nede i mere end 12 sekunder, slip derefter tasten.
2.B Tryk derefter kort på den nederste tast [0] (mindre end 2 sekunder).
2.C Tryk igen på den nederste tast [0] og hold den nede i mere end 12 sekunder, slip derefter tasten.
Trykket er nu i programmeringsmode. Hvis appen kvitterer med et "Switch has been detected" er
trykket indlært i gruppen - gå til Step 4.



Step 3

Hvis appen ikke kvitterede med et "Switch has been detected", gør følgende:
3.A Tryk kort på den nederste tast [0] (mindre end 2 sekunder), gentag dette (op til 16 gentagelser)
indtil appen kvitterer med et "Switch has been detected". Når appen har kvitteret med et "Switch has
been detected" er trykket indlært i gruppen - gå til Step 4.



Step 4

Afslut programmeringen af trykket ved at trykke kort (mindre end 2 sekunder)
på den øverste tast [I].

Step 5

Tjek at tænd/sluk og dæmp virker. I appen, tryk "Everything is fine" hvis alt er ok. Hvis det ikke virker
trykkes "My switch doesn't work" og der går tilbage til Step 2.
Kodning af trykket er hermed afsluttet, og øvrige indstillinger kan programmeres.

X Light I/S
Engvangen 7-9
2680 Solrød Strand
Tel: +45 5667 1100
info@xlight.dk
CVR: 26180466
www.xlight.dk