


# Instructions: X TOUCH, 2 Buttons Switch

**X LIGHT**®

**X CONNECT**  
WIRELESS SOLUTIONS

## Mounting instructions

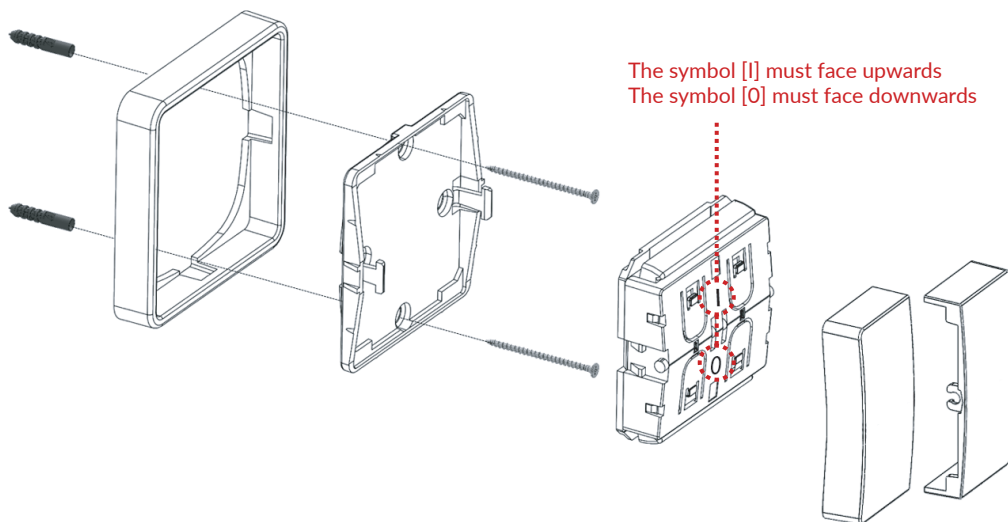

## Programming


Programming via app:



### Step 1

**Beware! Check that the electronics and the buttons are positioned as per the above illustration, and they are correctly assembled.**

Activate the programming mode through the Philips MC App. Please read more about how to do so on the instruction manual included in the luminaire.



### Step 2


Activate the programming mode of the switch by following these steps:

2A: Press and hold the lower left button [O] down for more than 12 seconds, then release the button.

2B: Press shortly the lower left button [O] (less than 2 seconds).

2C: Press the lower left button [O] again and hold it down for more than 12 seconds, then release it.

The switch is now in "programming" mode. If the app gives you as a feedback "switch has been detected", the switch is now included into the group, and you can move forward to step 4.



### Step 3

If the app did not show the feedback "switch has been detected", then proceed as follows:

3A: short pressure on the lower left [O] button (less than 2 seconds), and repeat up to 16 times, until the app shows the "switch has been detected" message. When the app shows this message, the switch is included into the group, and you can move forward to step 4.



### Step 4

Shut the programming mode down by pushing shortly (less than 2 seconds) on the upper left button.

### Step 5

Try the button out by switching the light on, off and dimming. In the app, push the button "everything is fine" if everything works as intended. If it does not work, press the button "my switch doesn't work" and repeat the steps from 2 on.

The coding of the switch is now terminated, and you can go on and program the other functions in the app.


**X Light I/S**

Engvangen 7-9  
2680 Solrød Strand  
Tel: +45 5667 1100  
info@xlight.dk  
CVR: 26180466  
www.xlight.dk

# Brugervejledning: X TOUCH 2 TANGENT



## Montering

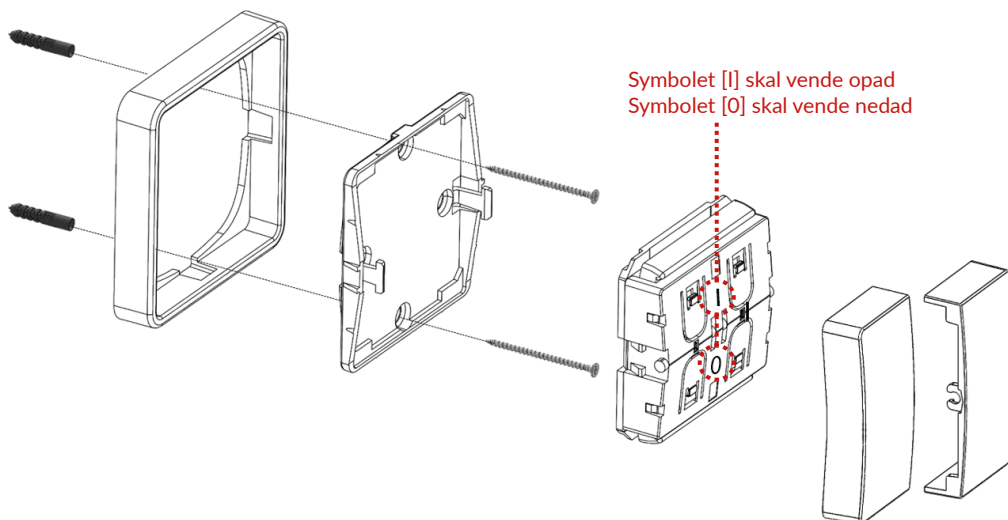

## Programmering

### Programmering via app:



#### Step 1

**OBS!:** Tjek at tangent og tryk vender som på ovenstående illustration og er sat korrekt sammen. Aktivér armaturets programmeringsmode via Philips MC App. Læs mere om hvorledes dette gøres i manualen der følger med armaturet.



#### Step 2

Aktivér trykkets programmeringsmode ved at gøre følgende:

2.A Tryk og hold den nederste venstre tast [0] nede i mere end 12 sekunder, slip derefter tasten.

2.B Tryk derefter kort på den nederste venstre tast [0] (mindre end 2 sekunder).

2.C Tryk igen på den nederste venstre tast [0] og hold den nede i mere end 12 sekunder, slip derefter tasten.

Trykket er nu i programmeringsmode. Hvis appen kvitterer med et "Switch has been detected" er trykket indlært i gruppen - gå til Step 4.



#### Step 3

Hvis appen **ikke** kvitterede med et "Switch has been detected", gør følgende:

3.A Tryk kort på den nederste venstre tast [0] (mindre end 2 sekunder), gentag dette (op til 16 gentagelser) indtil appen kvitterer med et "Switch has been detected". Når appen har kvitteret med et "Switch has been detected" er trykket indlært i gruppen - gå til Step 4.



#### Step 4

Afslut programmeringen af trykket ved at trykke kort (mindre end 2 sekunder) på den øverste venstre tast [1].

#### Step 5

Tjek at tænd/sluk og dæmp virker. I appen, tryk "Everything is fine" hvis alt er ok. Hvis det ikke virker trykkes "My switch doesn't work" og der gås tilbage til Step 2.

Kodning af tryk er hermed afsluttet, og øvrige indstillinger kan programmeres.